


Installation Instructions

- Before installing DRAW COLLAR or insert, chimney should be cleaned according to manufacturer specs.
- If DRAW COLLAR metal housing is damaged, contact a dealer for inspection or replacement.
- The cord may lay directly on insert. (high temp materials were used for safety)

DCWS-610 for Wood Stoves

1. Simply replace a six-inch section of stove pipe with the DRAW COLLAR. Sometimes this will require cutting a twelve-inch section out of the existing flue.
2. Be sure the cord coming from the DRAW COLLAR is coming out of the lower section and from the back of the unit (crimped end down).
3. Plug into a grounded three-pronged outlet. The DRAW COLLAR runs at 120V, 500 Watts. If a longer cord is required, be sure it is rated at 1875 watts, 16 AWG. You may also purchase a longer length at www.DRAW_COLLAR.com.
4. The DRAW COLLAR works best if the stove door is shut while creating draw.

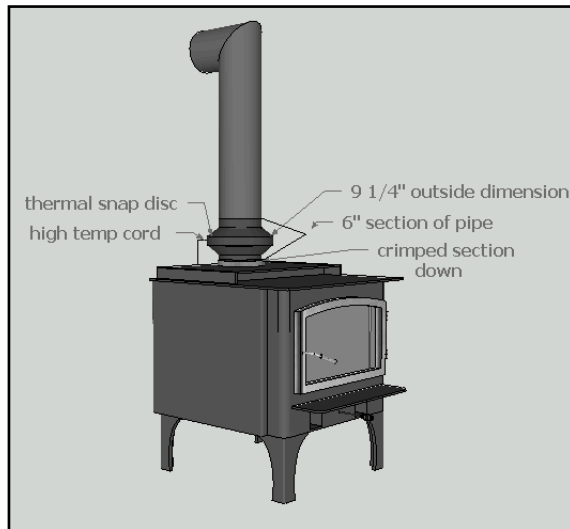

- The temperature sensor automatically shuts the DRAW COLLAR off when insert temperature is high enough to maintain draw, and as fire dies and temperatures lower, it turns the DC back on.
- DRAW COLLAR Specs: 500 w, 3.8 amps,
- Any questions please email cs@stockssquared.com

DCWI-610 for Wood Inserts

1. Install DRAW COLLAR into the flue collar on the insert with cord and temperature sensor plate to the front of the unit.
2. Slide insert into firebox.
3. Connect flue systems into DRAW COLLAR. For tight fit situations, the DRAW COLLAR may be attached to the flue liner first, and then secured to the insert (liner may require adapter or connector kit).
4. The cord will run from behind the insert panel to standard outlet (110v). An extension cord may be used when necessary.
5. If the temperature sensor needs replacement, contact the nearest dealer for service. **DO NOT attempt to replace without first unplugging the DRAW COLLAR.**

